




## BRSF/BRSI/BRSK asennusohje

Kiinnitä ulospuhallushajottaja/ilmanottokatos ruuveilla kattoläpiviintiin.

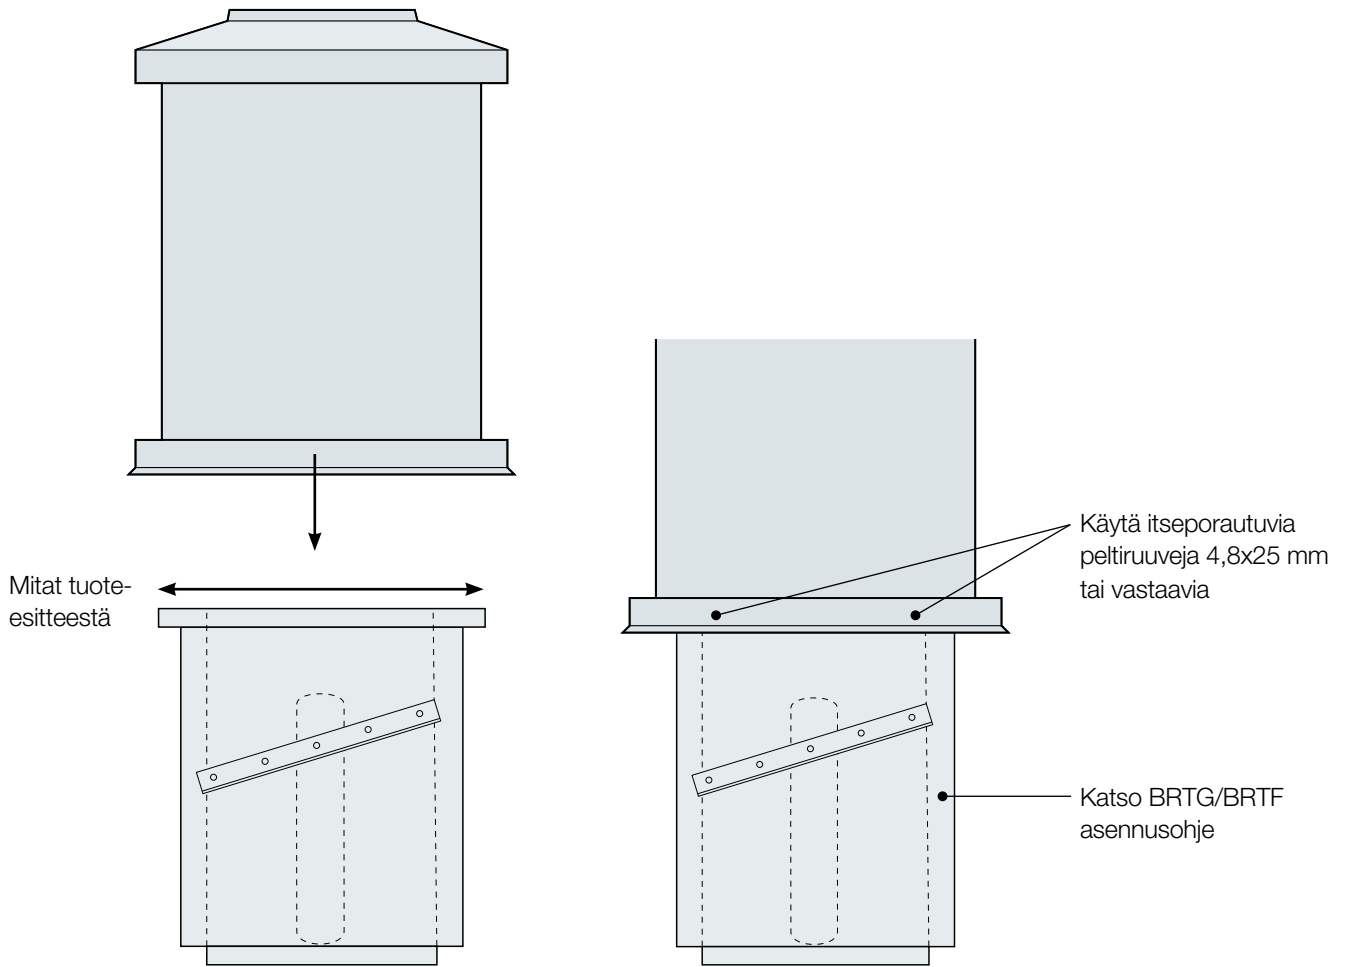

### Paino, kg

Koko	Paino kg		
	BRSF	BRSI	BRSK
200	12	14	24
300	18	20	33
400	24	27	43
500	33	36	60
600	46	46	75
800	74	76	136
1000	95	97	171
1200	117	120	210
1400	148	151	262
1600	181	186	320
1800	218	223	383
2000	260	281	438